

 
# Defiance Safe Co, Data Instruction Sheet

## How to open an Electronic Digital Lock safe, With Key

### To Open safe for the first time,

1. Press **ENTER** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **END** button (same as Enter)

You will hear an "OK" melody. Within 4 seconds, lift the handle up and open door  
**Note:** The key lock may be deadlocked. You need to turn the key clockwise 360°



## How to set your personal code

User can hold 1 personal number (4-16 digits available)

How to set your personal code

### To Change Pin Number Method One

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Enter your **NEW CODE**
4. Press the **END** button (same as enter)
5. You will hear an "OK" Melody
6. Check new number **ENTER -> CODE ->END**

### To Change Pin Number method Two

1. Press the **STORE** button
2. Enter the **Current CODE**
3. Press the **Enter** button.
4. Enter your **NEW CODE**
5. Press the **END** button (same as enter)
6. You will hear an "OK" Melody
7. Check new number **ENTER -> CODE ->END**

Notes on changing personal codes:

- Always check the new code with the **DOOR OPEN**
- Old numbers will be replaced with new one's
- Codes must be between 4 and 16 digits long
- Long delays between entering numbers may cause problems.

## Trouble Shooting

Problem: When code is entered Red lamp turns on and "ERROR" Melody played

Cause: Incorrect opening sequence was used (safe has detected incorrect code)

Solution: Check code and try again

Problem: Safe won't work or Safe won't open after setting code

Cause: Incorrect opening or setting sequence was used 3 times in a row. The safe has detected a possible attack. This triggers a time delay before re-entering the code

Solution: Allow safe "Time Out" for 15 min.

Problem: All key buttons are not work except **STORE** key

Cause: The button on the inside of door was held in and not pressed.

Solution: This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "Store" button for "Enter". EG **STORE -> Personal Code -> End**. Then open the safe as per normal **ENTER -> Personal Code -> End**

## How to change the batteries

1. When the battery is low the red lamp will glow after the ENTER button is pressed. Only a few openings are now possible
2. The battery housing is located behind the square shaped Electronic Digital Lock ( EDL) controller
3. Slide the EDL controller "UP" and "Fold" forward
4. Change 4 x AA batteries. Note: Always use good quality alkaline batteries. Other types may cause problems
5. Expected battery life of approx 1 year if used 5 times or less a day

