


Defiance Safe 1 Hour Fire Safe Instruction Sheet

To Open safe for the first time,

1. Press **ENTER** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **END** button (same as Enter)

You will hear an "OK" melody. Within 4 seconds turn the knob right and open door

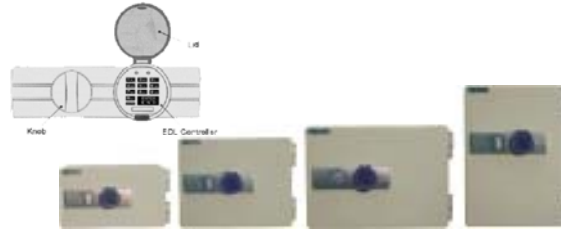

How to set your personal code

User can hold 2 personal number (2-25 digits available)

To Change Pin Number One

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Press the **ENTER** button
4. Enter your **NEW CODE**
5. Press the **END** button (same as enter)
6. You will hear an "OK" Melody
7. Check new number **ENTER -> CODE ->END**

To Change Pin Number Two

1. **Open** the door using existing code
2. Press the button on the **INSIDE** of door
3. Press the **STORE** button
4. Enter your **NEW CODE**
5. Press **END** button (same as Enter)
6. You will hear an "OK" Melody.
7. Check new number **ENTER -> CODE ->END**

Notes on changing personal codes

- Always check the new code with the **DOOR OPEN**
- Old numbers shall be replaced with new one
- Codes must be between 2 and 25 digits long
- Long delays between entering numbers may cause problems. After pressing the button on the inside of door you must enter the code within 5 seconds
- Green lamp must turn on while changing your code. (Check you pressed button on inside of the door.

Bolt Down Instructions

- Remove the bolt cap (unscrew anti-clockwise)
- Locate the safe into the chosen position and open the door of the safe.
- Mark the position of the hole (through the hole)
- Slide the safe away from the mark and drill a 5/8" hole in the concrete floor with a masonry drill to a minimum depth of 65mm.
- After removing the dust from the hole, gently hammer the Loxin (supplied) into the hole until it is flush with the floor
- Re-locate the safe into position and insert the bolt (supplied) through the hole in the safe and tighten until firm

Trouble shooting

Problem: When code is entered Red lamp turns on and "ERROR" Melody played

Cause: Incorrect opening sequence was used (safe has detected incorrect code)

Solution: Check code and try again

Problem: Safe won't work or Safe won't open after setting code

Cause: Incorrect opening or setting sequence was used 3 times in a row and the safe has detected incorrect code. This triggers a time delay before re-entering the code

Solution: Allow safe "Time Out" for 10 min.

Problem: All key buttons do not work except **STORE** key

Cause: The button on the inside of door was held in and not pressed.

Solution: This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "Store" button for "Enter". EG **STORE -> Personal Code -> End**. Then open the safe as per normal **ENTER -> Personal Code -> End**

How to Change battery

1. When the battery is low the red lamp will glow after the ENTER button is pressed. Only a few openings are now possible
2. The battery housing is located behind the round shaped Electronic Digital Lock (EDL) controller
3. Turn EDL controller anti-clockwise and pull forward the EDL
4. Change 4 x AA batteries. Note: Always use good quality alkaline batteries. Other types may cause problems
5. The unit will play a melody with correctly installed.
6. Expected battery life of approx 1 year if used 5 times or less a day

