

H O T E L S A F E

HOTEL SAFE

- Easy to use, and maintenance free.
- Quick to register a guest's personal code.
- A Changeable Master Code provides Emergency Override Procedures to Hotel Management.
- Opening attempts with wrong codes over 3 times by an unauthorized person make the lock get frozen.
- But, the guest need not worry about it. He only can reactivate the lock by pushing his right code twice in sequence.



HOW TO REGISTER YOUR PERSONAL CODE?

- 1st: Push Memory Button **M** on the backside of the door (LED lights on with 'Bi' sound).
- 2nd: While LED lights on, register your personal code by pushing the buttons in sequence (Maximum 17 digits).
- 3rd: Push Finish Button **#** (You hear a melody and now your personal code is registered)
 - To confirm if your personal code is correctly registered, please try to open the door using the registered number prior to closing the door.

HOW TO OPEN (OR CLOSE) THE DOOR?

- 1st: Push Start Button **C**.
- 2nd: Push Your Personal Code.
- 3rd: Push Finish Button **#** (You hear a melody).
- 4th: Turn knob clockwise (or counter-clockwise) and Pull (or push) Door while melody goes on (4 seconds).
 - In case of wrong code tried over 3 times, you hear a 'Bi Bi Bi Bi' sound, and the lock gets frozen and keeps quiet until it is released.
 - To release the frozen state, proceed the above opening steps (1st-3rd) twice in sequence.
 - (Ex. In case of personal code **123**, push the buttons as follows: **C123#C123#**).



SPECIFICATION

| Model | high | wide | deep | Weight | Capacity | Remarks |
|-------|---|------|-------|--------|----------|----------------|
| | | (mm) | | (Kgs) | (l) | |
| H2536 | 250 | 360 | 320 * | 13 | 27 | Non-Insulated |
| H3042 | 300 | 420 | 380 * | 17 | 45 | Non-Insulated |
| 530H | External : 530/400/460* Internal : 410/300/300 | | | 66 | 37 | Fire-Insulated |

* Including Key-Board



P.O. Box 5089 West Heidelberg MDC 3081