

# Defiance Safe Duo Data/Paper Fire Safe Instruction Sheet

## How to open Electronic Digital Lock Safe with Key

### To Open safe for the first time.

1. Press **#** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **#** button  
You will hear an "OK" melody. Within 4 seconds lift the handle up and open door



## How to set your personal code

User can hold 1 personal number (4-16 digits available)

### To Change Pin Number

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Enter your **NEW CODE**
4. Press the **#** button
5. You will hear an "OK" Melody
6. Check new number **# -> CODE -> #**

### Key Override

- Open the cover by sliding to the right.
- Use the override keys (two supplied) by turning the key 360° Clockwise
- Operate the handle to open.
- Note: Turn Key 360° Anti-Clockwise to lock handle again.

### Notes on changing personal codes:

- Always check the new code with the **DOOR OPEN**
- Old numbers shall be replaced with new one
- Codes must be between 4 and 17 digits long
- Long delays between entering numbers may cause problems. After pressing the button on the inside of door you must enter the code within 5 seconds
- Green lamp must turn on while changing your code.
- (Check you pressed button on inside of the door.)



### Trouble Shooting

Problem: When code is entered Red lamp turns on and "ERROR" Melody played

Cause: Incorrect opening sequence was used (safe has detected incorrect code)

Solution: Check code and try again

Problem: Safe won't work or Safe won't open after setting code

Cause: Incorrect opening or setting sequence was used 3 times in a row and the safe has detected incorrect code. This triggers a time delay before re-entering the code

Solution: Allow safe "Time Out" for 15 min.

Problem: All key buttons do not work except **Store** key

Cause: The button on the inside of door was held in and not pressed.

Solution: This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "\*" button for "#". EG \* -> CODE -> #. Then open the safe as per normal # -> CODE -> #

## How to Change battery

1. When the battery is low the red lamp will glow after the # button is pressed. Only a few openings are now possible. (You should also hear an error melody played.)
2. The battery housing is located behind the square shaped Electronic Digital Lock ( EDL) controller
3. Slide the EDL controller "UP"
4. Change 4 x AA batteries. Note: Always use good quality **alkaline** batteries. (Other types may cause problems)
5. You will hear a melody played when the last battery is inserted.
6. Expected battery life of approx 1 year if used 5 times or less a day

