

## 1. How to use changable combination lock?

- Opening Index is for normal dialing and opening.
- Changing Index is for setting a new combination.

This is a precision lock, and extreme care must be to align the combination numbers with the index. Turn Dial steadily. If, after turning the correct number of revolutions, any number is turned beyond the index, the entire series of combination numbers must be dialed again.

## 2. How to unlock?




The initial combination numbers from the factory are 50-25-50.

- Step 1 : Turn dial to the left, stopping when 50 is aligned with opening index at the 4th turn.
- Step 2 : Turn dial to the right, stopping when 25 is aligned with opening index at the 3rd turn.
- Step 3 : Turn dial to the left, stopping when 50 is aligned with opening index at the 2nd turn.
- Step 4 : Turn dial slowly to the right until it stops.
- Step 5 : Now turn the key in the cylinder lock to the right and open the door.

## 3. How to lock?

1. Close the door
2. Turn and remove the key
3. Spin the combination lock over 3 times to the left.

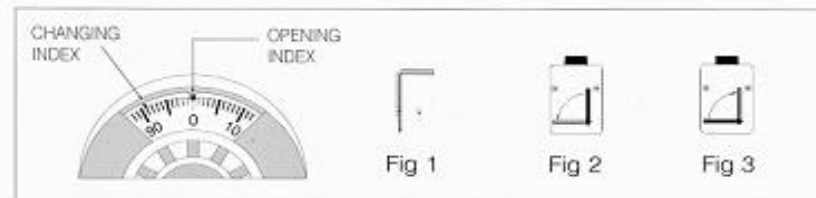

## 4. How to change combinations?

- Decide three sets of new combination numbers.
- Don't use numbers between 0 and 20 for the last combination.
- Don't use numbers in a rising or falling sequence (ex.35-50-75, 70-50-30).

- Step 1 : Using Changing index, dial the existing combination as explained in 'How to unlock?'
- Step 2 : Holding dial with the last number at the changing index, insert Changing Key in the key hole on the back of the lock (See Fig 1).
- Step 3 : Turn Key one quarter to the left (See Fig 2). Holding the changing Key in this position, turn Dial to the left until the first new combination number aligns with the Changing index at the 4th turn.
- Step 4 : Turn Dial to the right until the 2nd new combination number aligns with the Changing index at the 3rd turn.
- Step 5 : Turn Dial to the left until the 3rd new combination number aligns with the Changing index at the 2nd turn.
- Step 6 : Holding Dial in this position, turn Changing Key back to the original position right and remove it (See Fig 3).
- The new combination you have chosen is now set.

## 5. Caution

Before closing the door, try and check in accordance with the opening procedures if the new combinations are correctly set up.

## 6. Warning

1. Never insert Changing Key in the lock when the cover is removed.
2. Be certain that the wing of Changing Key is entirely inserted the lock before turning the key.
3. If an error were made in setting a new combination, we suggest an accredited locksmith to be called.