


# Defiance Safe 2 Hour Fire Safe Instruction Sheet

## How to open an Electronic Digital Lock safe, With Key

### To Open safe for the first time,

1. Press **ENTER** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **END** button (same as Enter)

You will hear an "OK" melody. Within 4 seconds, lift the handle up and open door  
**Note:** The key lock may be deadlocked. You need to turn the key clockwise 360°

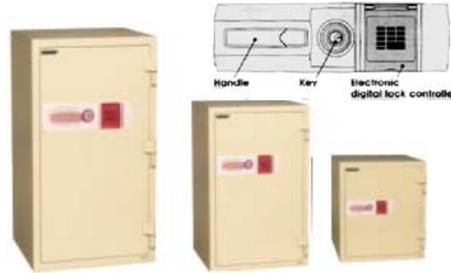

## How to set your personal code

User can hold 1 personal number (4-16 digits available)

How to set your personal code

### To Change Pin Number Method One

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Enter your **NEW CODE**
4. Press the **END** button (same as enter)
5. You will hear an "OK" Melody
6. Check new number **ENTER -> CODE ->END**

### To Change Pin Number method Two

1. Press the **STORE** button
2. Enter the **Current CODE**
3. Press the **Enter** button.
4. Enter your **NEW CODE**
5. Press the **END** button (same as enter)
6. You will hear an "OK" Melody
7. Check new number **ENTER -> CODE ->END**

Notes on changing personal codes:

- Always check the new code with the **DOOR OPEN**
- Old numbers will be replaced with new one's
- Codes must be between 4 and 16 digits long
- Long delays between entering numbers may cause problems.

## Trouble Shooting

Problem: When code is entered Red lamp turns on and "ERROR" Melody played

Cause: Incorrect opening sequence was used (safe has detected incorrect code)

Solution: Check code and try again

Problem: Safe won't work or Safe won't open after setting code

Cause: Incorrect opening or setting sequence was used 3 times in a row. The safe has detected a possible attack. This triggers a time delay before re-entering the code

Solution: Allow safe "Time Out" for 15 min.

Problem: All key buttons are not work except **STORE** key

Cause: The button on the inside of door was held in and not pressed.

Solution: This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "Store" button for "Enter". EG **STORE -> Personal Code -> End**. Then open the safe as per normal **ENTER -> Personal Code -> End**

## How to change the batteries

1. When the battery is low the red lamp will glow after the ENTER button is pressed. Only a few openings are now possible
2. The battery housing is located behind the square shaped Electronic Digital Lock (EDL) controller
3. Slide the EDL controller "UP" and "Fold" forward
4. Change 4 x AA batteries. Note: Always use good quality alkaline batteries. Other types may cause problems
5. Expected battery life of approx 1 year if used 5 times or less a day

