

# Defiance Safe 1 Hour Fire Safe Instruction Sheet

## How to open your Electronic Digital Lock

1. Press **ENTER** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **END** button (same as Enter)



You will hear an "OK" melody. Within 4 seconds turn the knob right and open door

## How to set your personal code

User's can hold personal numbers between 2 to 17 digits long.

### To Change Pin Method One

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Enter your **NEW CODE**
4. Press the **END** button (same as enter)
5. You will hear an "OK" Melody
6. Check new number **ENTER -> CODE ->END**

### To Change Pin Method Two

1. Press the **STORE** button
2. Enter the existing code
3. Press the **Enter** button
4. Enter your **NEW CODE**
5. Press **END** button (same as Enter)
6. You will hear an "OK" Melody.
7. Check new number **ENTER -> CODE ->END**

## Notes on changing personal codes

1. Always check the new code with the **DOOR OPEN**
2. Old numbers shall be replaced with new one
3. Codes must be between 2 and 17 digits long
4. Long delays between entering numbers may cause problems. After pressing the button on the inside of door you must enter the code within 5 seconds

## Troubleshooting

**Problem:** When code is entered Red lamp turns on and "ERROR" Melody played

**Cause:** Incorrect opening sequence was used (safe has detected incorrect code)

**Solution:** Check code and try again

**Problem:** Safe won't work or Safe won't open after setting code

**Cause:** Incorrect opening or setting sequence was used 3 times in a row and the safe has detected incorrect code. This triggers a time delay before re-entering the code

**Solution:** Allow safe "Time Out" for 10 min.

**Problem:** All key buttons do not work except **STORE** key

**Cause:** The button on the inside of door was held in and not pressed.

**Solution:** This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "Store" button for "Enter". EG **STORE -> Personal Code -> End**. Then open the safe as per normal **ENTER -> Personal Code -> End**

# Defiance Safe 1 Hour Fire Safe Instruction Sheet

## Bolt Down Instructions

1. Remove the bolt cap (unscrew anti-clockwise)
2. Locate the safe into the chosen position and open the door of the safe.
3. Mark the position of the hole (through the hole)
4. Slide the safe away from the mark and drill a 5/8" hole in the concrete floor with a masonry drill to a minimum depth of 65mm.
5. After removing the dust from the hole, gently hammer the Loxin (supplied) into the hole until it is flush with the floor
6. Re-locate the safe into position and insert the bolt (supplied) through the hole in the safe and tighten until firm

## How to use Override Keys

1. Slide battery cover to the left and remove
2. Remove batteries from housing.
3. With a Phillips screwdriver remove the two screws behind batteries
4. Lift plastic housing away (cheerfully not to damage wires)
5. Insert key into cylinder and turn 360° to unlock door.
6. Reverse instructions to replace.

Note: Remember to turn key back 360° to return lock to standard operation.

## How to Change Battery

1. When the battery is low the red lamp will glow after the ENTER button is pressed. Only a few openings are now possible
2. The battery housing is located behind the square shaped panel
3. Slide the cover to the **LEFT** and lift forward
4. Change 4 x AA batteries. Note: Always use good quality **Alkaline** batteries. Other types may cause problems
5. Expected battery life of approx 1 to 2 year if used 5 times or less a day

